


J2 LASHER GUARD TEMPLATE KIT

P/N 70014

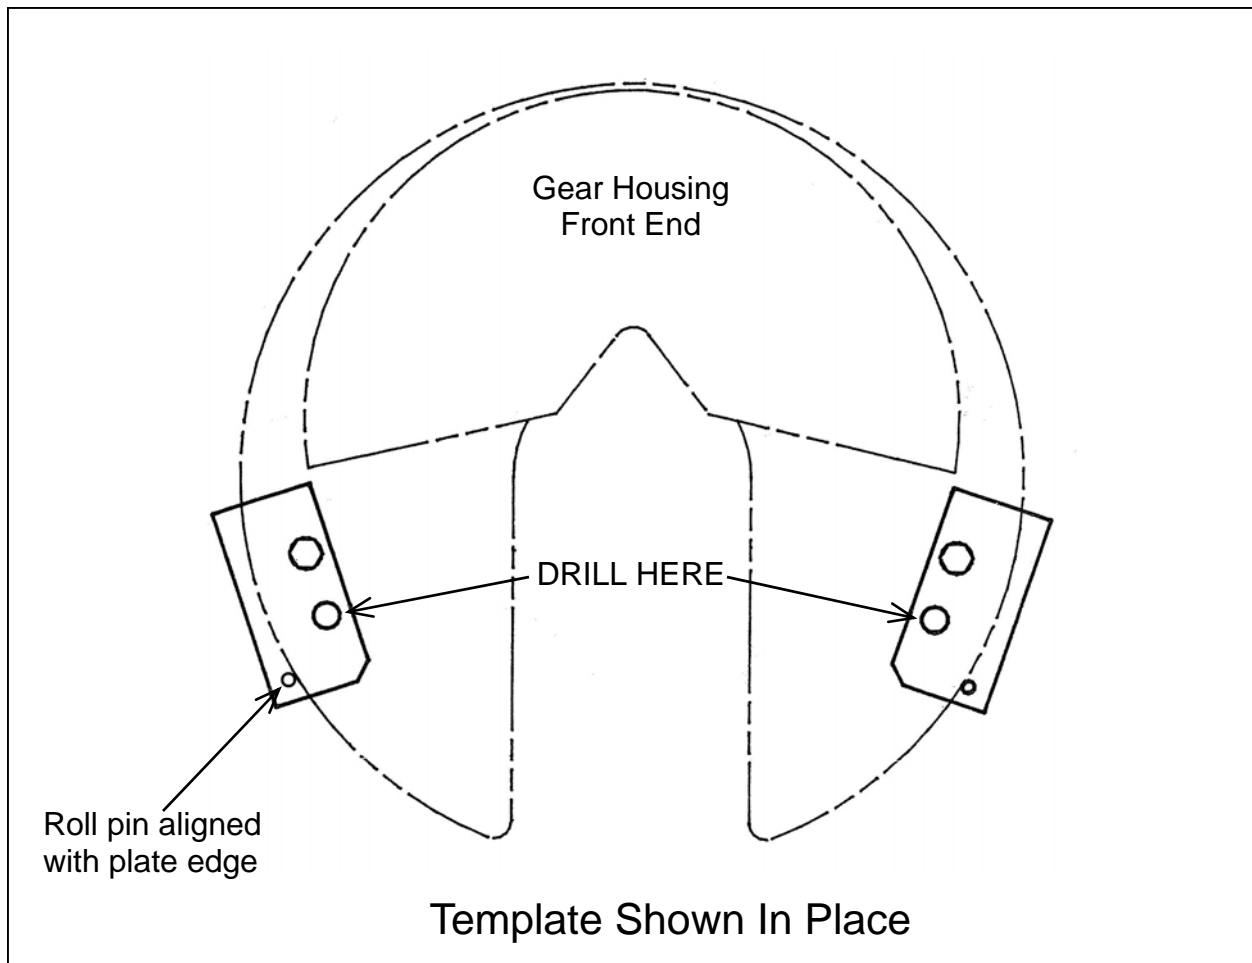

About Your Kit

Each kit contains the following:

- One template
- Two (2) 3/8-16 X 5/8" mounting bolts

To use this kit, you'll also need to assemble the following tools:

- Standard power drill
- 5/16" drill bit
- Tap wrench
- 3/8-16 tap

Modification Procedure

Place the large hole on the template over the left nut on your J2 Lasher, and align the roll pin with the edge of the plate.

Drill a 5/16" \varnothing hole through the template's hole indicated above, and remove the template. Tap the hole for a 3/8-16 thread.

Reverse the template and perform the same steps on the right side. Mount the Lasher Guard onto your J2 Lasher using the bolts in this kit.



GENERAL MACHINE PRODUCTS CO., INC.

3111 Old Lincoln Highway
Trevose, PA 19053

Tel: 215-357-5500

Fax: 215-357-6216

Email: info@gmptools.com

www.gmptools.com