



# INSTALLATION INSTRUCTIONS DOUBLE E - LOC<sup>®</sup> COUPLINGS


Mark Conduit for insertion depth

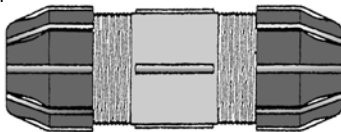


Mark Conduit



Loosen Locknuts until 1" of thread is visible on each side of the body. Mark each conduit 3 1/4" from the end (for 1" to 1 1/4" sizes), 3 3/8" from the end (for 1 1/2" sizes) or 3 7/8" from the end (for 2" sizes)

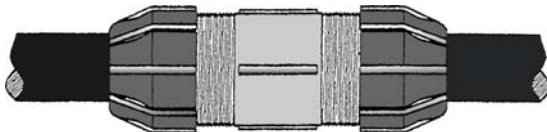

Push conduit into each end making sure each conduit is tight against the center stop and inserted to the marked line

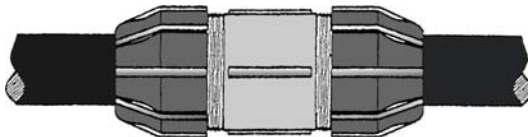

Hand tighten each locknut

**SOLD BY**



**General Machine Products Co.** 3111 Old Lincoln Highway Trevose, PA 19053 USA  
Tel: +1.215.357.5500 Fax: +1.215.357.6216 Email: [info@GMPtools.com](mailto:info@GMPtools.com)