
GMP Whisper Drill Stand P/N 89948

Assembly Instructions





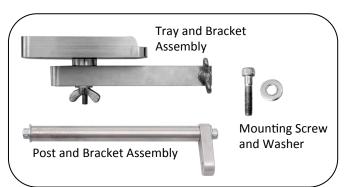

Place the tripod face down on a flat surface. Note the bolt that holds the mounting screw. With 13mm wrench, remove that bolt from the bottom of the tripod as shown in photo.



Securely attach Post and Bracket assembly to tripod with screw and washer provided using a 6mm hex wrench.



Remove screw and washer from end of post and bracket assembly using a 6mm hex wrench



Slide tray and bracket assembly over post and tighten wing nut as shown in photo



Replace screw and washer on end of post and bracket assembly using 6mm hex wrench

